


METERS: LC Meters

Ordering Information

Model number coding description

MSA-7-A-10

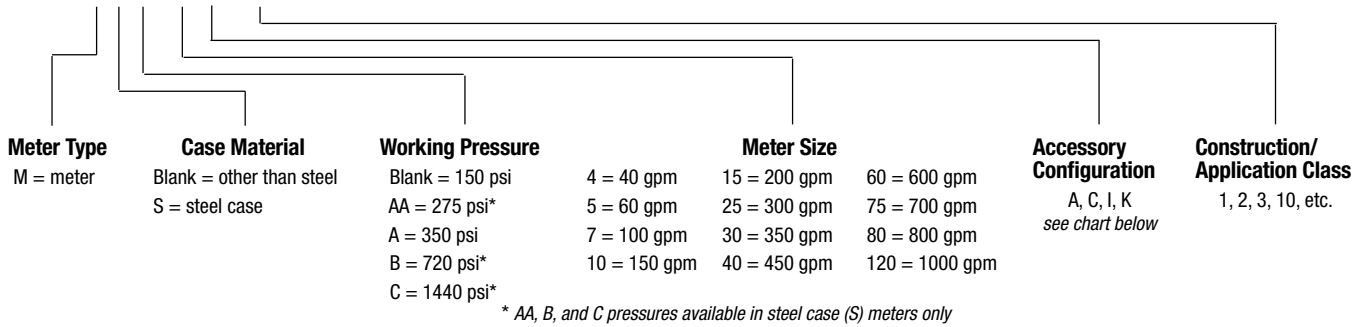


Standard accessory configurations

A Meter with counter




Optional Accessories: Printer, Strainer

C Meter with counter, strainer and air eliminator

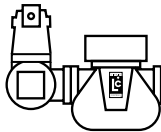


Optional Accessories: Printer

I Meter with counter, preset counter and preset valve

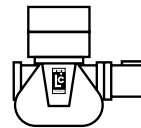


Optional Accessories: Printer, Strainer

K Meter with counter, preset counter, preset valve, strainer and air eliminator

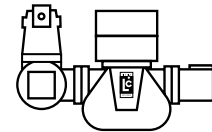


Optional Accessories: Printer

 ALI Meter with electronic register



Optional Accessories: Printer, Strainer, Valve, ETVC

CLI Meter with electronic register, strainer, and air eliminator

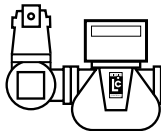

Optional Accessories: Printer, Valve, ETVC

Mounting arrangements

LC meters may be mounted in a variety of configurations, as shown below. Do not position the meter on its side, i.e., with cover plate face down or up.



Regardless of meter mounting configurations, accessories such as the air/vapor eliminator must always be mounted in a vertical orientation to permit proper operation of the float-actuated apparatus.